

Návod na montáž




Model : FP - C03




1 1X20	2 1X10	3 1X28	4 1X4	5 5 a 5 b 20 Sads	6 1X4	7 7 a 7 b 1X2 1X4	8 8 a 8 b 2 Sads	9 1X20	10 1X12
---------------	---------------	---------------	--------------	-----------------------------	--------------	-----------------------------	----------------------------	---------------	----------------


KOMPONENTY

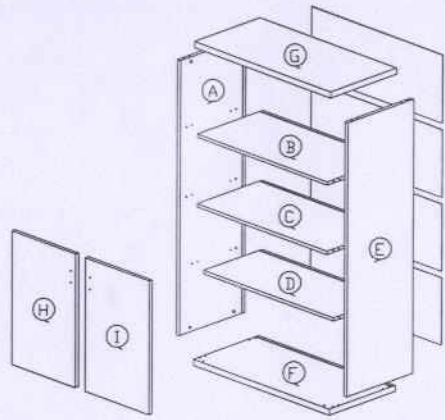


Krok 1

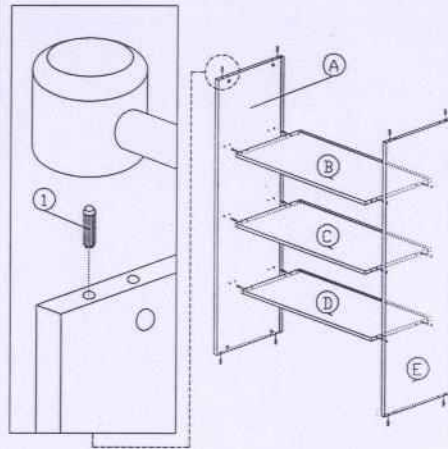


Krok 2

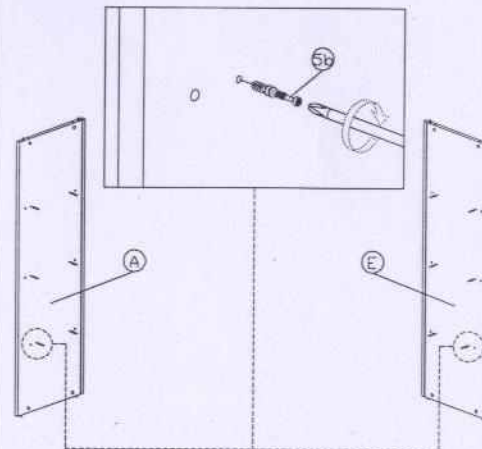


Krok 3

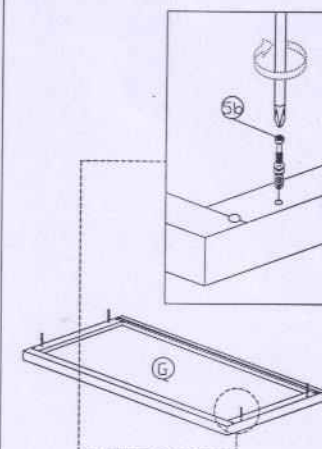


Krok 4

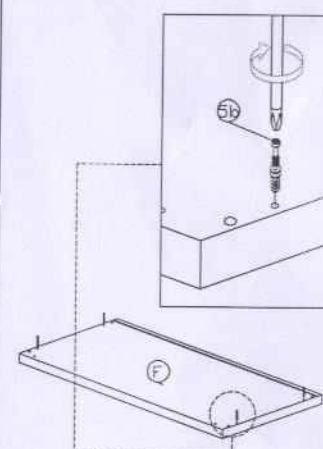


Krok 5

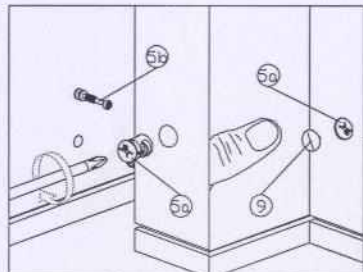


Krok 6

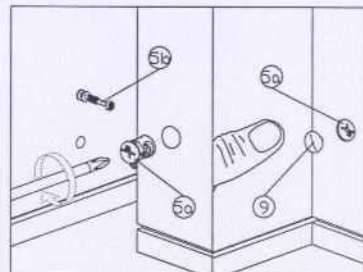


Krok 7

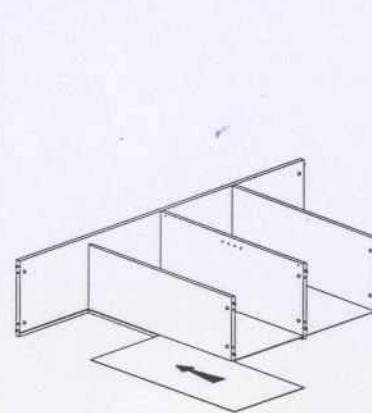

Krok 8

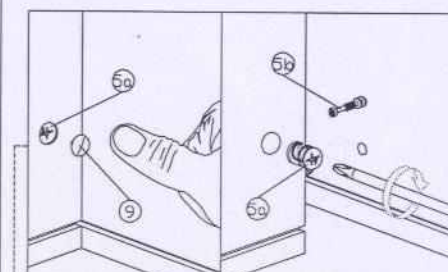

Krok 9

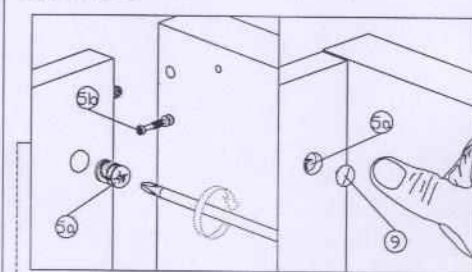


Návod na montáž




Model : FP - C03




Krok 10

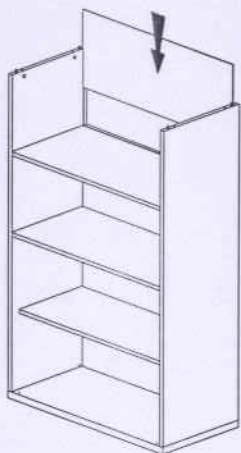


Krok 11

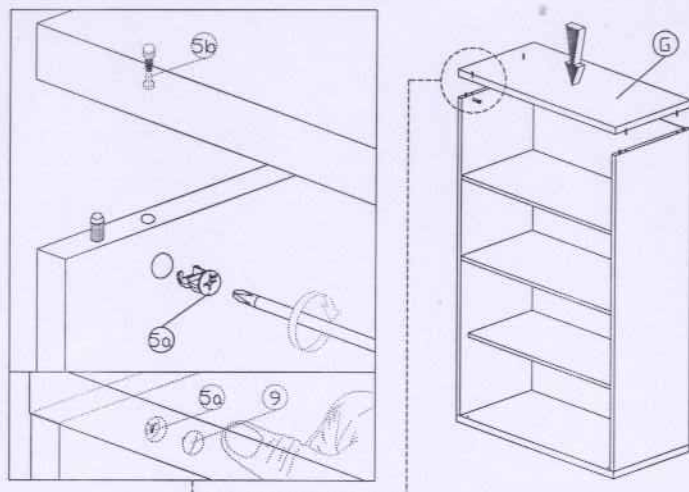


Krok 12

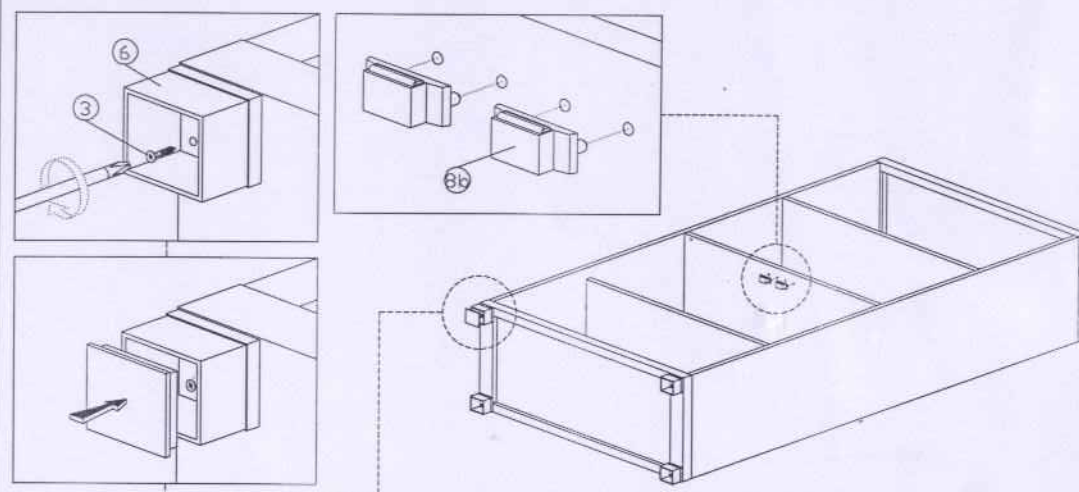


Krok 13

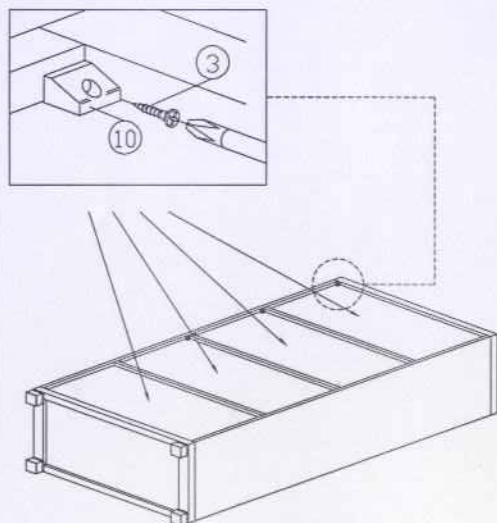


Krok 14

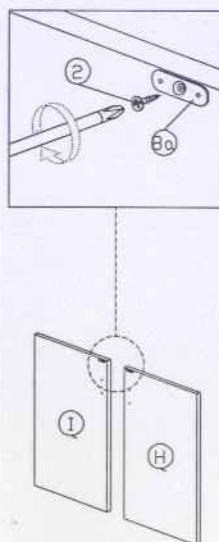

Krok 15

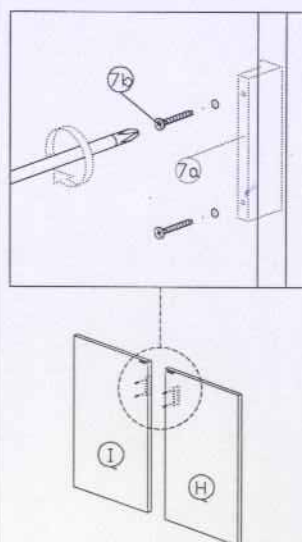

Krok 16

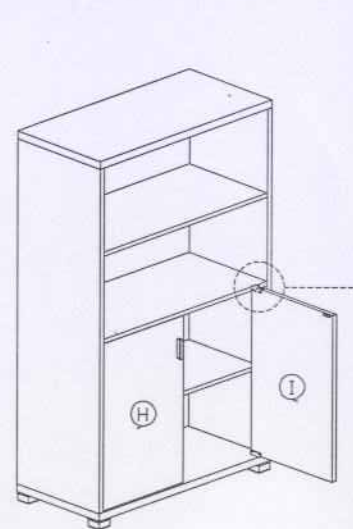

Krok 17

